 
 


USER MANUAL

9.66" TOUCH SCREEN DVR MIRROR WITH FULL HIGH DEFINITION FRONT & REAR CAMERAS



INTRODUCTION

Thank you for purchasing a Parkmate Mirror DVR with Dual Full High Definition 1080p Dash Cameras with Reversing Mode. We are certain that our product will give you trouble free operation while providing you with a safety feature that enhances your driving experience. Our products, like most after-market safety enhanced devices, are designed to assist and aid the driver, not to replace the manual function of the person operating the vehicle. Please read through these instructions before attempting to install this product. For the latest manual updates, please see www.parkmate.com.au or www.parkmatehd.co.nz.

CAUTION

- Ensure you are using your MCPK-962DVR within your countries' road laws. Please make sure you are familiar with your local road legislation before use.
- Avoid leaving your MCPK-962DVR in direct sunlight for extended periods of time in an unventilated space.
- Please set time and date before you use this device to record.
- The reverse camera is only to be used for reference. Please drive to the actual conditions of the road.
- The system is to be used only for non-commercial use, within the limits permitted by the relevant laws.
- Avoid using the Mirror DVR in the vicinity of any devices that emit radio interference (eg. Microwave Ovens).
- It is considered normal operation for the MCPK-962DVR Mirror DVR to get warm during use.

BATTERY WARNING

- Always charge the Mirror DVR using the provided charger. Improper charging of the MCPK-962DVR may result in failure of the internal battery.
- Never dismantle the Mirror DVR or expose the internal battery.
- Do not dispose of the MCPK-962DVR in fire.
- Dispose of the MCPK-962DVR observing local regulations being mindful of the internal battery.
- Do not attempt to replace or expose the internal battery.

NOTES ON INSTALLATION

- Make sure that the mirror's camera lens is within the range of the windscreen wiper to ensure a clear view when it rains.
- Do not touch the lens with your fingers. Finger prints left on the lens will result in unclear videos or photos. If photos or videos are blurred, please clean the lens gently with a microfibre cloth.
- Only use the included charging cable to power the MCPK-962DVR.
- The Reverse camera is to be installed near your vehicle's rear number plate on the exterior of your vehicle

DISCLAIMER

Parkmate's MCPK-962DVR Mirror DVR and & Reverse Camera Pack is designed as a driver assistance device. Although this is a visual aid and will allow you to view what is behind the vehicle, it does not remove the responsibility of driving the vehicle from the driver. The legal responsibility and safe driving practise remains with the driver at all times. You have purchased this product with the understanding that its use is as an aid only. We highly recommend that you have this product professionally installed to ensure that it will provide the functions it is set out to perform.

CONTENTS

01	FEATURES	7
02	PACKAGE CONTENTS.....	7
03	PRODUCT OVERVIEW	8
04	GETTING STARTED.....	9
	4.1 INSERTING/REMOVING A MICRO SD CARD	9
	4.2 MCPK-962DVR MOUNTING OPTIONS	10
	4.3 INSTALLING THE MCPK-962DVR VIA RUBBER CLIPS	10
	4.4 INSTALLING THE MCPK-962DVR VIA OEM MIRROR REPLACEMENT	11
	4.5 INSTALLING THE MCPK-962DVR MIRROR ON YOUR VEHICLE'S WINDSCREEN.....	12
	4.6 CONNECTING THE MCPK-962DVR TO POWER	13
	4.7 CONNECTING THE REVERSE CAMERA	13
	4.8 POWERING THE MIRROR DVR ON/OFF.....	15
05	PLAYING BACK RECORDED VIDEO ON A PC.....	16
06	VOICE CONTROL	16
07	TOUCH SCREEN	17
	7.1 INITIAL SETTINGS.....	17
08	USING THE MCPK-962DVR.....	18
	8.1 RECORDING VIDEO	19
	8.2 LOCKED RECORDING.....	20
	8.3 REVERSE CAMERA.....	20


8.4	ENABLING VOICE COMMANDS	21
8.5	RECORDING SCREEN	22
8.6	VIDEO MODE	25
8.7	LOOP RECORDING	25
8.8	NIGHT VISION MODE.....	26
8.9	EXPOSURE	26
8.10	LDWS.....	27
8.11	G SENSOR	27
8.12	PARK MODE	28
8.13	AUTO DISPLAY OFF.....	28
8.14	LANGUAGE	29
8.15	VOLUME.....	29
8.16	FLICKER.....	30
8.17	DEFAULT CAMERA SETTING.....	30
8.18	DATE / TIME.....	31
8.19	FORMAT SD-CARD	31
8.20	RESET	32
09	VOICE CONTROL	32
10	FIRMWARE VERSION	33
11	WARRANTY TERMS & CONDITIONS:	34

01 FEATURES






- 1080P front facing camera recording Full High Definition footage at 30 frames per second
- Full High Definition Rear Camera with Reverse Camera function
- Both Cameras Record at Full High Definition @ 30fps
- 9.66" Full Screen IPS Touch Screen
- Voice Control Function with 9 commands
- 24 Hour Parkmode
- 150 degree wide angle lens Front Camera & 140 degree wide angle lens Rear Camera
- Locked Recording saves your footage when an impact is detected
- Supports Micro SD cards, class 10 and above up to 128GB
- Waterproof IP67 Rear Camera

02 PACKAGE CONTENTS

1. Mirror DVR
2. Reverse Camera
3. 8M Reverse Camera Cable
4. Rubber Fasteners
5. 12V Adapter
6. 4mm EVA pads
7. Mounting Plate
8. Mounting Arm
9. Fastener Clips
10. Screws

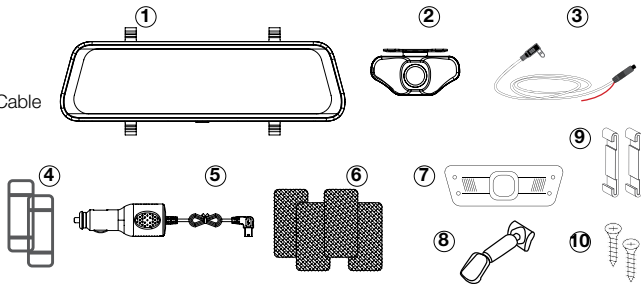

03 PRODUCT OVERVIEW

  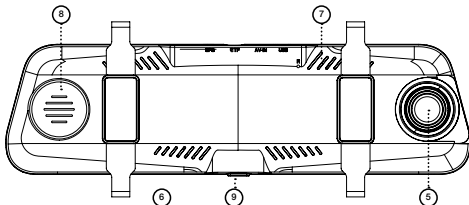  

1.	Mini USB Port to connect power
2.	AV IN for Rear Camera
3.	Micro SD Card Slot (SD Card not included)
4.	GPS Port (not compatible with this model)
5.	Front Camera Lens
6.	9.66" 2.5D Touch Panel
7.	Reset Button
8.	Speaker
9.	Power Button / Display OFF
10.	Microphone
11.	Rear Camera

04 GETTING STARTED

4.1 INSERTING/REMOVING A MICRO SD CARD

With the Mirror DVR turned off and the screen facing towards you, insert the memory card with the text on the Micro SD card facing you. Push the memory card in until a click is heard.

To remove the memory card, ensure that the Mirror DVR is powered off, then push the memory card until a click is heard and then release the card to eject.

NOTE:

1. Do not remove or insert the memory card while the Mirror DVR is turned on as this may damage the memory card or corrupt the memory cards stored data.
2. Please use a Class 10 or higher rated micro SD card with a maximum capacity of 128GB.
3. Please format the Micro SD card before the initial use.
4. When removing the memory card, be careful as the card may eject quickly.
5. Micro SD Card is not included.

4.2 MCPK-962DVR MOUNTING OPTIONS

The MCPK-962DVR has 2 mounting options included for your convenience.

You can select to mount your MCPK-962DVR onto your existing rear view mirror using the "Rubber Clips" provided or replace your existing rear view mirror with our "OEM Replacement Mount" option.



Clip on Mount: Fig 1



Clip on Mount: Fig 2



OEM Mount Replace: Fig 3



OEM Mount Replace: Fig 4

4.3 INSTALLING THE MCPK-962DVR VIA RUBBER CLIPS

1. Place both the supplied fastener clips on the back side of DVR Mirror and screw in place (**Fig 1**).
2. Remove the tape from EVA PADS, there are 2 sizing options for the EVA PADS, depending on your original mirror depth select the most suitable foam size (**Fig 2**).
3. There are 2 types of fasteners; please use which ever suits your car. The longer fasteners are for the bulky pre-installed rear view mirrors.
4. Loop the rubber fasteners over the top fastener clips.
4. Put the Mirror DVR in position on the front face of your existing rear view mirror ensuring that the camera lens clears the edge of your rear view mirror.
5. Loop the bottom rubber fasteners over the mirror and attach to the bottom fastener clips.

4.4 INSTALLING THE MCPK-962DVR VIA OEM MIRROR REPLACEMENT

The MCPK-962DVR comes with a mounting bracket kit to replace your original rear view mirror.

NOTE:

1. The generic mount used by the MCPK-962DVR is designed to fit majority of vehicles. Please check that your vehicle uses a compatible mount before attempting to install the MCPK-962 DVR.

You will need to completely remove your original mirror and replace it with the provided mounting bracket to correctly install this product.


1. Place mounting plate on the back side of DVR Mirror and screw in place **(Fig 3)**.
2. Place the mounting arm on the mounting plate and screw the arm onto the mounting plate **(Fig 4)**.
3. Remove the original rear view mirror off the windscreen of the car
(Please ensure you follow the appropriate instructions to remove your original rear view mirror).
4. Remove the original rear view mirror leaving the metal base on the windscreen
5. Please follow installations as mentioned on **page 12**.

NOTE:


1. The rear view mirror in some cars may be harder to remove than others. If you are having difficulties removing your original rear view mirror, please do not use excessive force as you risk breaking your windscreen. If you are having any difficulty removing your vehicle's original mirror, we recommend you seek a professional installer. To attach the supplied mirror mounting base if required, please use dedicated Rear View Mirror Adhesive (not supplied) which is available at all leading Automotive Parts Suppliers.

4.5 INSTALLING THE MCPK-962DVR MIRROR ON YOUR VEHICLE'S WINDSCREEN


1. Line up the mounting arm with the metal mount base.

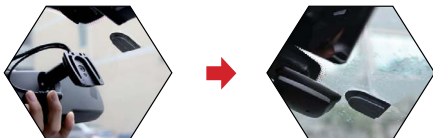

2. Insert the mounting arm on the top of the metal mount base, aligning both edges and slide the mounting arm into position in the direction specified.

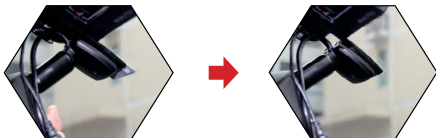

3. Fix the mounting arm bracket in place by tightening the screw at the bottom of the mounting arm bracket with a screw driver.

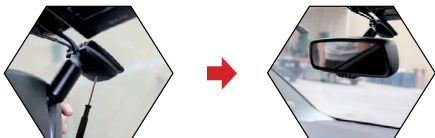

** Images for reference only*




IMPORTANT NOTE

It is highly recommended that you seek the professional help of an auto installer before removing your original windscreen mirror base and fitting the MCPK-962DVR.

4.6 CONNECTING THE MCPK-962DVR TO POWER

Only use the included charger to power and charge the MCPK-962DVR.

1. Once the Mirror DVR is securely installed onto your vehicles rear view mirror, plug the 12V DC charger into your vehicle's cigarette lighter adapter or power source.
2. Run the cable along your vehicles console and windscreen and plug it into the Mirror DVR port marked with the USB icon.

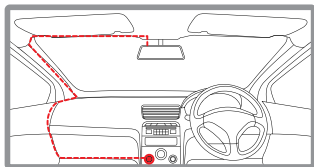


NOTE:

1. Make sure that the cameras view is not obstructed by any window tint or any other objects.
2. If your vehicle has side curtain airbags please be very careful when running any cables along your vehicle windows. Ensure you are not running cables past any of the airbags as this can prevent the airbags from deploying.


4.7 CONNECTING THE REVERSE CAMERA

INSTALLATION GUIDE


1. Select a flat and centred location near the number plate lamp at the rear of the vehicle to mount camera.

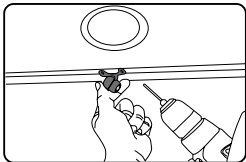


2. Attach tape to the bracket of the camera to hold the camera in position while installing, and drill two small holes, one for the first screw, the second to run the reverse camera cable through.

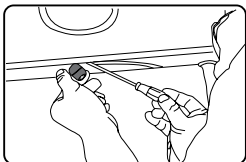


- 3.** Use a screw driver to fix the first screw, leaving the screw loose enough to adjust the camera.

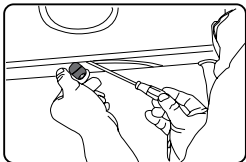

- 4.** Insert the camera wire through the intended drilled hole checking the installation position.

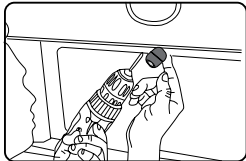


- 5.** Mark the position suitable for the second screw and drill a small hole for it.

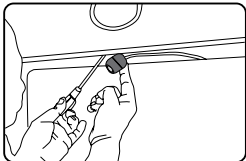

- 6.** Fix the second screw and securely tighten both screws.

REVERSE CAMERA WIRING DIAGRAM

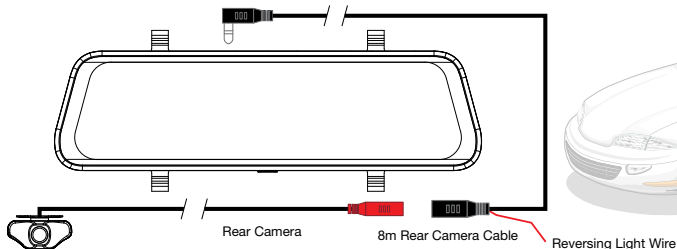

4.8 POWERING THE MIRROR DVR ON/OFF

AUTO POWER ON/OFF


When the MCPK-962DVR is correctly installed and connected to your vehicles' 12V DC power supply, the Mirror DVR will automatically power on and start recording when the car's accessories are activated. The Mirror DVR will automatically stop recording and shut down when your vehicle is powered off.

MANUAL POWER ON/OFF

MANUAL POWER ON

Press and hold the Power button at the bottom of the Mirror DVR until the Parkmate start up screen appears.

MANUALLY POWER OFF

If the Mirror DVR is currently recording, please manually stop the recording by touching the  REC icon on the display. Then press and hold the Power button at the bottom of the MCPK-962DVR. After powering off the device please wait for 10 seconds before powering the Mirror DVR on again.

RESETTING THE DEVICE

If the Mirror DVR does not function normally, try restarting the Mirror DVR. To restart the Mirror DVR with a flattened paper clip, press the small button on top of the Mirror DVR next to the USB port.

05 PLAYING BACK RECORDED VIDEO ON A PC

To playback video files on your PC it is recommended to connect the Micro SD card (not included) directly to your PC using either a USB Micro SD card reader (not included) or if your PC has a SD card slot, a Micro SD/SD Card converter (not included). Once the Micro SD card is connected it should appear as a removable storage device. It is recommended that you transfer video files that you want to playback to a folder on your computer before attempting to playback. This will reduce any delay in playback.

06 VOICE CONTROL

Enjoy handsfree operation and use your voice to control your Mirror DVR. Just speak towards the mirror with one of 9 Pre-Programmed commands and the mirror will respond as requested.

To enable voice commands just speak loudly near mirror in a normal speed, saying the following phrases:

"TURN ON DISPLAY" - Turn ON the Mirror Display

"TURN OFF DISPLAY" - Turn OFF the Mirror Display

"SHOW FRONT CAMERA" - Show Front Camera feed on Mirror Display

"SHOW REAR CAMERA" - Show Rear Camera feed on Mirror Display

"SHOW ALL CAMERAS" - Show Both Front and Rear Camera feed as split screen on Mirror Display

"LOCK THE VIDEO" - Save & Protect from deletion the current recording from Front & Rear Cameras

"TAKE PICTURE" - Take an instant still image snapshot from the Front Camera

"TURN ON AUDIO" - Turns ON Microphone recording

"TURN OFF AUDIO" - Turns OFF Microphone recording

07 TOUCH SCREEN





This Mirror Cam uses a capacitive touch screen, this makes operation very easy and efficient.

7.1 INITIAL SETTINGS

Before using your **MCPK-962DVR** we recommend **Formatting** the Inserted Micro SD Card and **Setting the Time and Date**.

7.1.1 FORMATTING THE INSERTED SD CARD

Formatting the Micro SD card will delete all information on the inserted Micro SD Card and prepare the card for use with the Car DVR.









1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch**  to enter the **SETTINGS MENU**.
3. Use the  and  Buttons to navigate the **SETTINGS MENU** and **touch** the **Format SD-Card** to select.
4. **Touch YES** and then **touch OK**.

NOTE:

1. Menus cannot be accessed while the camera is recording. Please stop the recording before attempting to access the menu.
2. Formatting your Micro SD Card will delete all files from the Micro SD Card. Once these files have been deleted you will not be able to recover them.

7.1.2 DATE / TIME

Setting the **Time and Date** allows you to stamp your footage with the time as a reference.

1. Touch  to stop the Mirror DVR from recording.
2. Touch the  to enter the **SETTINGS MENU**.
3. Touch the  and  Buttons to navigate the **SETTINGS MENU** and touch the **DATE / TIME SETTINGS** to select.
4. Touch the  and  Buttons (beneath the Setting Date/Time) to edit the selected digit and the  button to confirm and progress to the next digit. The final field sets the format that the date will be presented in.
5. To save the date and time, touch the  Button.

NOTE:

1. Menus cannot be accessed while the camera is recording. Please stop the recording before attempting to access the menu.
2. Once the time and date is set it can be stamped onto your footage.

08 USING THE MCPK-962DVR



IMPORTANT NOTE

After Connecting to Power, the Mirror DVR will switch ON, Main menu screen will be displayed and the Mirror DVR will start recording.

Please press the Power Button to leave the Menu screen and to use the mirror as conventional rear mirror. Mirror DVR will continue recording in back ground.

8.1 RECORDING VIDEO

When the Mirror DVR is connected to your vehicles 12v power supply, the Mirror DVR will automatically power up and begin recording when you start your vehicle. During the start up the buttons will be unresponsive and the camera will take a moment to begin recording. The Mirror DVR will automatically stop recording and shutdown when your vehicle is powered off.

NOTE:

1. Because of how some vehicles are wired, the recording may continue when the engine is switched off. If this happens, please manually turn off the Mirror DVR or remove the car adapter from the cigarette lighter when not in use.
2. The recording loop length can be configured to save a video file for every 1,3 or 5 minutes of recording. For information on how to adjust this setting please refer to the Loop Recording section of this manual.
3. The device saves the recorded footage and Photos on to the inserted Micro SD Card. If the memory card capacity is full, the oldest file in the memory card will be overwritten.
4. The reverse camera is designed to assist with recording and reversing. Reverse assistance will be displayed on the DVR Screen immediately when you change to Reverse Gear.

8.2 LOCKED RECORDING

Locked Recording saves the current video file and protects it from being overwritten. To manually start a Locked Recording follow the instructions below.

1. During recording **touch** the  button.
2. To stop lock recording **touch** the  button again.

NOTE:

1. If the G Sensor function is enabled and a collision is detected, the device will automatically trigger the emergency recording and protect the current video file.

Please refer to the section titled **G Sensor** for information on adjusting this setting.

2. The emergency recording file is created as a new file, which will be protected to avoid being overwritten by normal loop recording. If the inserted Micro SD Card fills up with Emergency Recording files the message “SD Card Full” will appear on the screen, and the oldest emergency file will be automatically deleted when a new emergency recording file is created.

8.3 REVERSE CAMERA

The Reverse Camera is designed to record and also assist with reversing by showing your rear view from your bumper reducing blind spots. When installed correctly, the Reverse camera will activate when your vehicles reverse gear is selected, and the reverse cameras feed will be displayed on screen. When your vehicles reverse gear is deselected the Reverse Camera will keep on recording the rear video.

NOTE:

1. The Reverse Camera this is a visual aid and will allow you to view what is behind the vehicle, it does not remove the responsibility of driving the vehicle from the driver.
2. To ensure correct operation, it is highly recommended that the Reverse Camera is professionally installed.

8.4 ENABLING VOICE COMMANDS

Your Mirror DVR comes with voice commands which gives you hands free comfort. To enable the commands please say them exactly as mentioned.

"TURN ON DISPLAY" - Turn ON the Mirror Display

"TURN OFF DISPLAY" - Turn OFF the Mirror Display

"SHOW FRONT CAMERA" - Show Front Camera feed on Mirror Display

"SHOW REAR CAMERA" - Show Rear Camera feed on Mirror Display

"SHOW ALL CAMERAS" - Show Both Front and Rear Camera feed as split screen on Mirror Display

"LOCK THE VIDEO" - Save & Protect from deletion the current recording from Front & Rear Cameras







"TAKE PICTURE" - Take an instant still image snapshot from the Front Camera







"TURN ON AUDIO" - Turns ON Microphone recording

"TURN OFF AUDIO" - Turns OFF Microphone recording

8.5 RECORDING SCREEN



Number	Icon	Item	Description
1		Recording Indicator	The Record Indicator will flash when the Mirror DVR is Recording.
2	04.25.34	Recording Duration Indicator	Shows the current recording duration.
3		Microphone Indicator	Shows if microphone is On /OFF. If Microphone is OFF Video recorded will be muted.
4	ADAS	ADAS Indicator	ADAS will help you to drive safely with LDWS (Lane Departure Warning System).
5		Park Mode Indicator	Park Mode will keep your car safe by recording footage in the event of any impact detected when car is parked. Park Mode will work for 24 hours after the Mirror DVR is fully charged and will record a maximum of 5 videos.
6		G Sensor Indicator	G Sensor will lock the recorded files immediately after detection of an impact.
7		Battery Indicator	Shows if charger is connected and working.
8	15:15:25	Current Time	Shows the current time.
9	13.12.2019	Current Date	Shows the current date.
10	THU	Current Day	Shows the current day.
11		Start / Stop Recording	Touch this button to Start/ Stop Recording.



12		Take Picture	Touch this button to take picture. Recording has to be stopped before taking picture. Pictures will be stored on separate folder on SD Card.
Number	Icon	Item	Description
13		Microphone On/Off	Touch this button to start/stop microphone. Turning Off Microphone will mute the recorded videos.
14		Locked Recording	Touch this button to lock/unlock current recorded video.
15		Play Back	Touch this button to get in to recorded file folder. Play, Lock or delete any recorded file.
16		Display Selection	Touch this button to change the display options: <ul style="list-style-type: none"> • Full Screen Front View • Full Screen Rear View • Split Screen front and Rear • In Reverse mode, Screen will be with full reverse view to help you in parking and reversing. • You can also switch between displays by just flicking the screen from right to left or by soft pressing the Power key can also help you to toggle between the displays.
17		System Settings	Touch to enter into System Settings.

8.6 VIDEO MODE

When the Mirror DVR is powered on, recording of both Front and Rear camera will automatically start and can be stopped by touch pressing the screen to activate full menu and then touch

pressing 






You can also change the recording format by following below steps:-

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing 
2. Video mode will be highlighted, and you can change the recording format to either FHD 30 fps and HD 60 fps.
3. Higher the fps, higher is the resolution of recorded video and bigger Video files.

Default Setting: 30 fps

8.7 LOOP RECORDING

Loop recording allows you to set the duration that the camera will record before creating a new clip. To set the clip length please follow the instructions below:

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing 
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the Loop Recording
3. **Touch** one of the 3 options 1 min, 3 min and 5 min.
4. To save your selection, **touch** the  Button.

Default Setting: 3 min

NOTE:

1. Menus cannot be accessed while the camera is recording. Please stop the recording before attempting to access the menu.
2. To avoid filling the card quickly it is advised to use the 1 or 3 minute options.

8.8 NIGHT VISION MODE






Night Vision Mode adjusts the image contrast to provide brighter pictures during recording.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Night Vision**.
3. **Touch** On or Off.
4. To save your selection, **touch** the  Button.

Default Setting: Off

8.9 EXPOSURE






Exposure is used to manually control the light sensitivity settings. To change the Exposure settings follow the instructions below.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Exposure** button
3. **Touch** the button to select the parameter.
4. To save your selection, **touch** the  Button.

Default Setting: 0

8.10 LDWS






Lane Departure Warning System uses the front camera to monitor your driving position within the driving lane. It will provide display notification and audio beep to alert you when you are drifting away from the lane.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **LDWS** button.
3. **Touch** On or Off to make selection.
4. To save your selection, **touch** the  Button.

Default Setting: On

8.11 G SENSOR

The built-in G Sensor monitors your vehicle against impact and will automatically protect the current recording in the event of a collision. Turn Off or adjust the sensitivity of the built in G Sensor. The G Sensor detects forces which will automatically protect the current recording in event of a collision.






1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **G Sensor** button.
3. **Touch** High, Medium, Low and Off to make selection (Recommended level selection: Low)
4. To save your selection, **touch** the  Button.

Default Setting: Off

NOTE: This does not affect Parking mode sensitivity.

8.12 PARK MODE

Park Mode detects any activity from the built in G Sensor once you have parked your vehicle. If an impact is detected, the Mirror DVR will power up and record a clip. To activate Park Mode please follow the instructions below.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing 
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Park Mode** button.
3. **Touch** On or Off to make selection.
4. To save your selection, **touch** the  Button.






Default Setting: Off

NOTE:

1. Park Mode operates off of the internal battery, this will allow for 2-3 clips to be saved before the battery will deplete depending on if the battery is fully charged.

8.13 AUTO DISPLAY OFF

Setting the Screen time out will set the time after which the screen will switch off automatically while the DVR will continue recording.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing 
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Auto Display Off** button.
3. **Touch** Off/1min/2min/3 min to make selection.
4. To save your selection, **touch** the  Button.








Default Setting: 1 min

NOTE:

1. We suggest to keep setting as 1 min as it may restrict your rear camera view while driving. You can soft press the power key to switch off display, DVR will continue recording.

8.14 LANGUAGE

Select preferred language.






1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Language** button.
3. **Touch**  and  to select the language .There are 14 language options to select from.
4. To save your selection, **touch** the  Button.

Default Setting: English

8.15 VOLUME

Control the volume of beep sound which is heard when a button is pressed and also the start-up and shut-down chimes.





OPTIONS: Off/High/Middle/Low. **Default Setting:** On

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Volume**.
3. **Touch** High, Medium, Low and Off to make selection.
4. To save your selection, **touch** the  Button.

Default Setting: Low

8.16 FLICKER

Flicker option is used to select the frequency of power applicable in the country where Mirror Cam is being used . In case wrong frequency of light source is selected, interference of horizontal stripes will appear in the image while recording in.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Flicker**.
3. **Touch** 50Hz or 60Hz to make selection.






Default Setting: 50Hz

NOTE:

For Australia 50 Hz

8.17 DEFAULT CAMERA SETTING









You can select which camera you prefer to be the default camera to display on your Mirror DVR after Power On.

1. **STOP Recording** by pressing  and then enter **Settings Menu** by pressing .
2. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Default Camera Setting**.
3. **Touch** Front or Rear to make your selection.
4. To save your selection, **touch** the  Button.

Default Setting: Rear camera display





8.18 DATE / TIME

Setting the Time and Date allows you to stamp your footage with the time as a reference.

1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch** the  to enter the **Settings Menu**.
3. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Date / Time** button.
4. **Touch** the  and  Buttons (beneath the Setting Date/Time) to edit the selected digit and the  button to confirm and progress to the next digit. The final field sets the format that the date will be presented in.
5. To save the **date and time**, **touch** the  Button.

8.19 FORMAT SD-CARD

Formatting the Micro SD card will delete all information on the inserted Micro SD Card and prepare the card for use with the Mirror DVR.

1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch** the  to enter the **Settings Menu**.
3. Use the  and  Buttons to navigate the **Settings Menu** and **touch** the **Format SD-Card** to select.
4. Touch **YES** and then touch **OK**.





NOTE:

1. Menus cannot be accessed while the camera is recording. Please stop the recording before attempting to access the menu.

2. Formatting your Micro SD Card will delete all files from the Micro SD Card. Once these files have been deleted you will not be able to recover them






8.20 RESET

Resetting will delete all your settings and will go back to default factory settings.

1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch** the  to enter the **Settings Menu**.
3. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Reset Setup**.
4. **Touch YES** to confirm reset.






09 VOICE CONTROL

To turn ON / OFF the Voice control function on your Mirror Cam.

1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch** the  to enter the Setting Menu.
3. **Touch** the  and  Buttons to navigate the Settings Menu and touch the Voice Control
4. **Touch** OFF to turn OFF or ON to turn ON.
5. **Touch**  Button to go back to main menu.

10 FIRMWARE VERSION

FW Version will display the firmware of your Mirror Cam.

1. **Touch**  to stop the Mirror DVR from recording.
2. **Touch** the  to enter the **Setting Menu**.
3. **Touch** the  and  Buttons to navigate the **Settings Menu** and **touch** the **Firmware Version**
4. Firmware version will be displayed.
5. **Touch**  Button to go back to main menu.

11 WARRANTY TERMS & CONDITIONS:

Our goods come with guarantees that cannot be excluded under the Australian & New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian & New Zealand Consumer Law.

Directed Electronics warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect.

In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics. Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics, will be borne by you.

Directed Electronics Address: 44 Translink Drive, Keilor Park Victoria Australia 3042

Ph: +61 03 8331 4800

Email: service@parkmate.com.au

To view the complete Parkmate range or for details on how to contact us, please visit our website at
www.parkmate.com.au

parkmate[®]
YOUR SAFETY COMES FIRST[™]

parkmate HD

www.parkmate.com.au
www.parkmatehd.co.nz

DIRECTED
AUSTRALIA & NZ



All Images, Information and Content are Copyright © 2019 Directed Electronics Australia Pty Ltd. All Rights Reserved.